



## 16” Electriflame XD

### Packing Checking List

<b>Package 1</b>	1	off	Electric fire
	1	off	Remote control handset
	2	off	AAA batteries
	1	off	Instructions manual
	1	off	Decorative fret (if ordered)
	1	off	Decorative frame

**THIS INSTRUCTION BOOKLET MUST BE LEFT WITH THE USER**

# **INSTALLATION INSTRUCTIONS**

**This fire must be installed by a qualified, competent person.**

## **A. Location**

1. The 16" x 22" versions of this fire is designed to be installed into a fireplace with a opening of 560mm in height by 420mm in width. The 22" x 22" version is designed to be installed into a fireplace with a opening of 560mm in height by 580mm in width. The fire must not be in contact with any combustibile materials.
2. This appliance is for indoor installation only and is not designed to be installed outside. The appliance must be kept away from any source of damp or moist conditions. Avoid any close contact with water.
3. Important Notice:  
To reduce heat losses and to prevent any chimney up draught affecting the operation of your insert fire, we recommend that the chimney flue is blocked off.
4. If there is any doubt regarding the suitability of the installation site contact your supplier.

## **B. Electrical Work**

### **THIS PRODUCT MUST BE EARTHED**

1. If the mains socket is required to be concealed this can be sited adjacent to the right hand side of the fire.
2. Should the fire be connected directly into the mains supply a fused switch spur with a 13 amp fuse must be fitted. It is imperative that the power supply is capable of handing a load of 2000 watts.(2kW). Allow sufficient flex to enable the fire to be removed from the wall.
3. If the supply cable is damaged in any manner it **MUST** be replaced.
4. Do not connect the appliance to an extension lead.
5. The fire must not be modified from the manufactures specification in any way and the appliance must only be used for the purpose recommended by the manufacturer.
6. If the fire shows any signs of damage it is important that it is examined by a qualified person.
7. Please observe these instructions as failure to do so may result in electric shock or other injury.
8. Check the technical specification.
9. Always ensure that all electrical work complies with the relevant Building Regulations and the Electrical Code of Practice. All electrical work should be carried out by a qualified electrician.
10. Do not install a time switch to operate the appliance.
11. If in any doubt contact your supplier or a qualified electrician.

## **THE INSTALLER SHOULD EXPLAIN FULLY HOW TO OPERATE THE APPLIANCE**

### **OPERATING INSTRUCTIONS**


**Please read these instructions carefully before attempting to use the appliance and retain for future use.**

1. When the fire is in operation certain areas will get hot. Caution must be taken to avoid being burned.
2. The fire must not be switched on if volatile vapors are present in the room.
3. Children must be supervised around the fire.
4. Do not obstruct the air flow around the appliance.
5. Ensure that the fire is switched off at the mains before cleaning or carrying out any maintenance work.
6. When the fire is not in use it should be switched off at the mains supply.
7. Do not push any objects through the vent of the fire as this may result in an electric shock or could cause a fire.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
9. In order to avoid overheating, do not cover the heater.
10. Make sure the heater is not located immediately below a socket outlet.
11. This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

## Control panel on Fire

The control panel is located behind the louvers. Press where indicated to open louver panel. The center of the louvers will get hot when the heater is switched on.

- A On/off Isolating Switch
- B Flame Effect Dimmer Switch
- C Low Heat 900W
- D High Heat 1800W

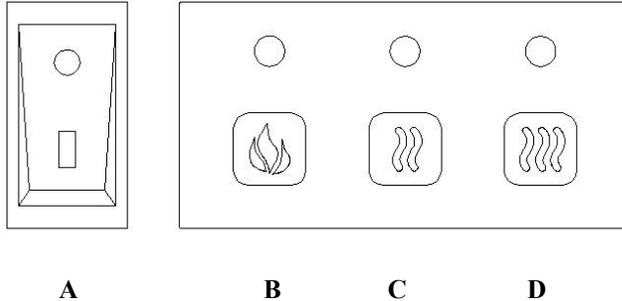

## Remote Control


Prior to use the remote control handset requires the insertion of 2 x AAA batteries.

Remove the cover on the rear of the remote handset by sliding backwards. Install the batteries as shown and then slide the cover back into the original position.

To enable the remote control to function the power to the fire must be switched on.

At a distance of 1.5 meters to 2 meters point the remote control handset directly towards the bottom right hand side of the fire.

- A. On/off Switch
- B. Flame Effect adjuster - To operate, press one to five times to commence the cycle of 3 different brightness levels and one motion ember bed effect level. Press a fifth time to shut down the flame&ember bed effect.
- C. Low Heat
- D. High Heat
- E. LED decorative lights (selected models only)

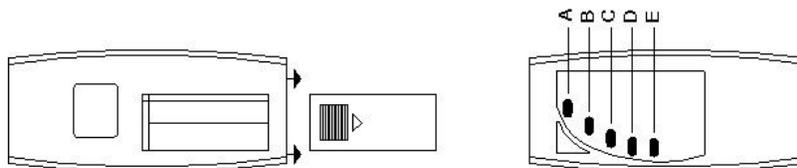

## **TECHNICAL SPECIFICATION**

Power Supply	230V AC 50Hz		
General Power	10W	to	1800W
Heat Power	900W	to	1800W
Flame Effect	10W	to	12W

**Heater has an over heating power cut off safety feature.**

### **MAINTENANCE INSTRUCTIONS**

#### **Cleaning the Fire**

Switch off the power to the fire and allow it to cool before cleaning.

Use a soft damp (not wet) cloth.

Household Glass Cleaner can be used on the Fire Glass.

### **WARRANTY**

In the unlikely event of a problem occurring due to a manufacturing fault within 24 months from the date of purchase of the appliance it will be repaired or replaced free of charge.

This warranty does not cover consumable items which have a limited lifespan.

If a problem should occur, the nature of the problem together with the date of purchase and installer information should be immediately reported to the retailer that the appliance was purchased from. Proof of purchase will be required so the original invoice should be retained.

**Part NO.: B-174600-2(X)**

**B-174600-2(S)**



Issue 4

BFM Europe Ltd  
Gordon Banks Drive  
Trentham Lakes  
Stoke-on-Trent  
ST4 4TJ

Telephone (General Enquiries) 01782 339000

Telephone (Service ) 01782 339008